

Log Assembly: LOGS-QVI30FB
Models: QVI-30FB, QVI-30FB-S


LOG PLACEMENT
INSTRUCTIONS

Log Placement

CAUTION: Logs are fragile! Carefully remove the logs from the packaging.



LOG #1 (SRV2020-140): Place log #1 by locating the legs of log over the air deflector. The notch or the back side of the log should center and sit against air deflector.

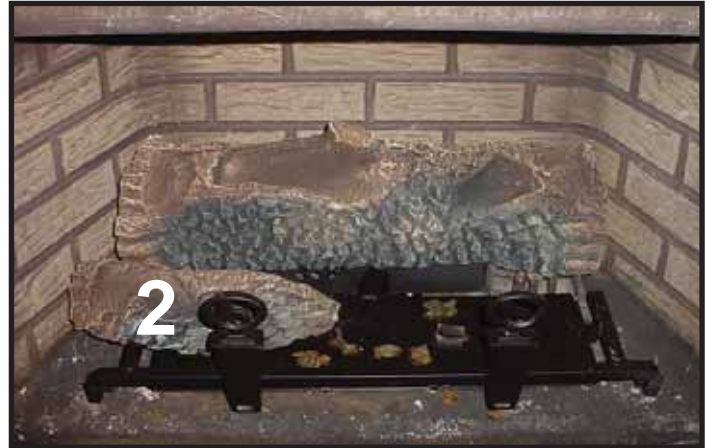

LOG #2 (SRV2020-141): Position log #2 by locating its slot over the tab on the front left of the burner. The slot in the left end of the log slides over the grate. Slide right corner of log all the way forward on the tab.



LOG #3 (2020-142): Position log #3 by locating its slot over the tab on the front right of the burner. The slot in the right end of the log slides over grate. Slide log all the way back on tab and grate.



LOG #4 (SRV340-704): Place log #4 across log #1 and log #2 in the grooved out areas as shown.



LOG #5 (SRV340-706): Place log #5 across log #1 and log # 3. The notch in the bottom of the log sets on the carved out edge on top of log #3. The back of the log sits in the grooved out area in log #1.



LOG #6 (SRV340-705): Place log #6 across log #1 and log #5. The notch in the bottom of log #6 rests in the carved out section on top of log #5 and the left end of the log sits in the horizontal carved out section of log #1.



LOG #7 (SRV740-707): Place log #7 across logs #1 and #3 in the grooved out areas as shown.