

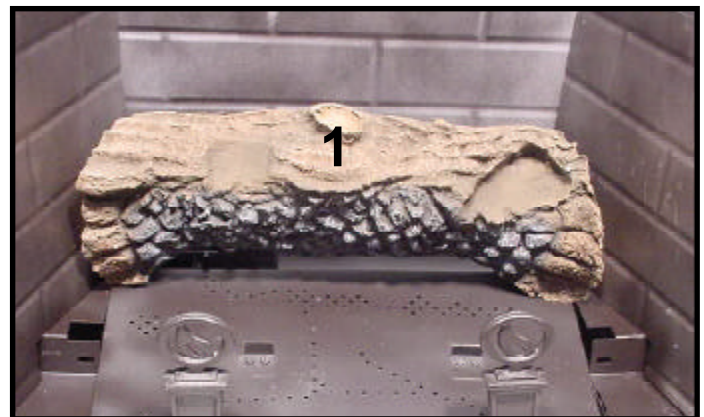
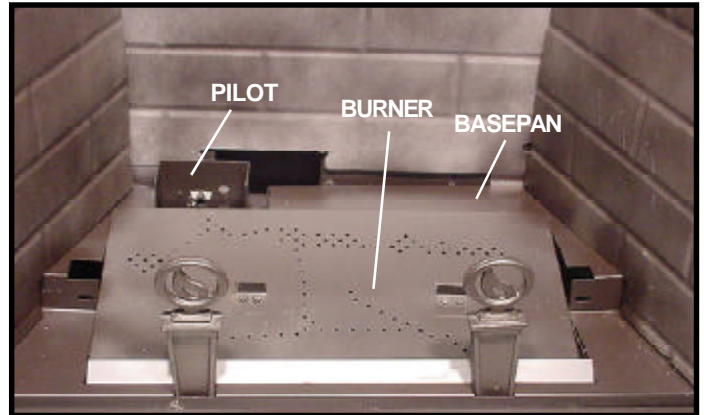



Carefully remove the logs from the packaging.
CAUTION: Logs are fragile!

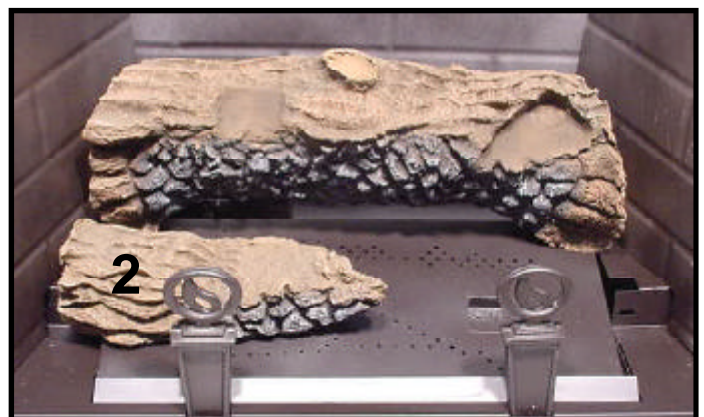



LOG #1 (SRV310-701): Place log #1 in the back on the insert. Locate the legs of the log to either side of the burner. Pull the log forward until the log is stopped by the back edge of the burner. Slide the log to the left so it touches the left wall of the fireplace.

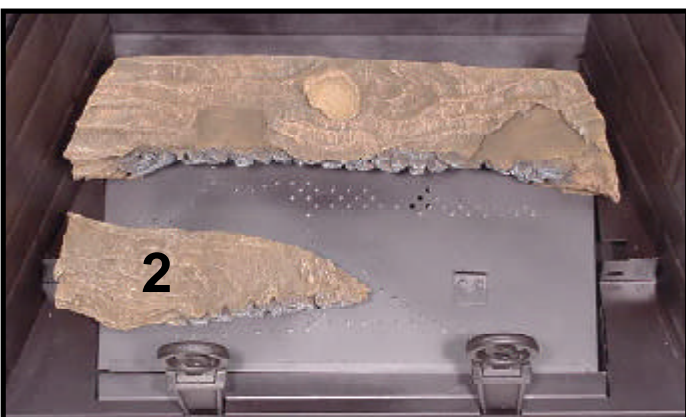



LOG #2 (SRV310-702): Position log #2 by locating its slot over the tab on the front left of the burner. The slot in the left end of the log slides into the metal edge in front of the square cut out on the base pan.

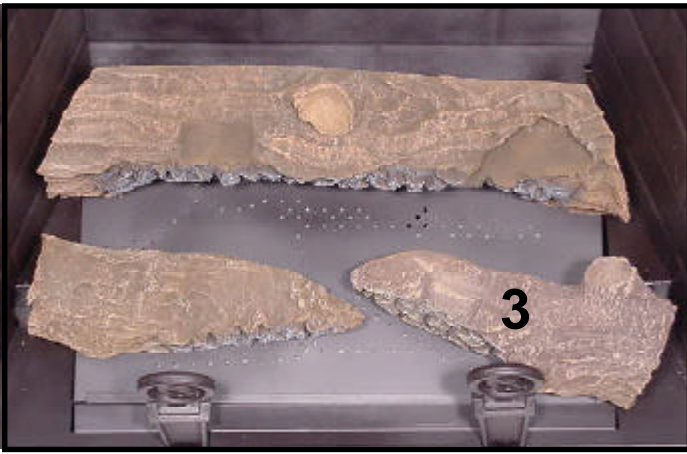

LOG #3 (SRV310-703): Position log #3 by locating its slot over the tab on the right front of the burner. Pull log #3 forward until it touches the angled lip on the base pan.

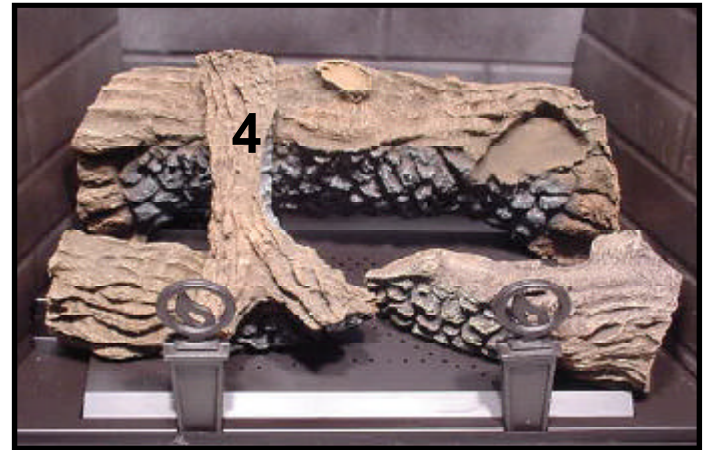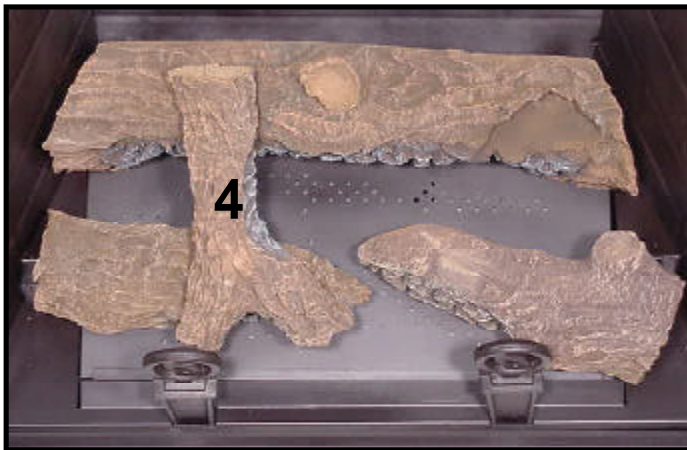

LOG #4 (SRV340-704): Nest log #4 in the smooth cut-out areas on the left side of log #1 and right side of log #2. The "Y" end of log #4 rests on log #2.

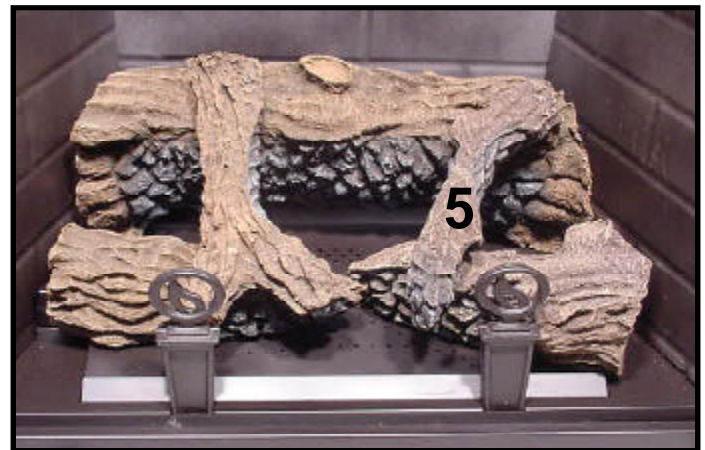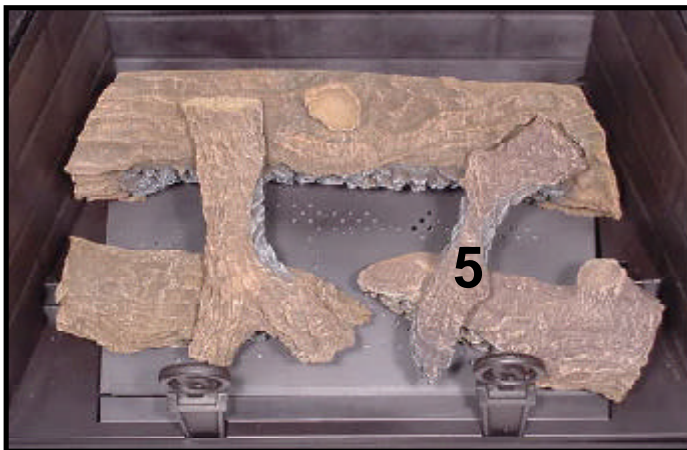

LOG #5 (SRV310-705): Place log #5 across log #1 and log #3. The notch in the bottom of the log sits on the carved out edge on top of log #3. The back of the log sits in the grooved out area in log #1.