

**Note:** Do not use the tabs in the base pan for log placement purposes.


**CAUTION:** Logs are fragile! Carefully remove the logs from the packaging.



**LOG #1 (SRV330-701):** Place log #1 in the back on the insert. The log should fit tightly side to side and be against the back of the insert.




**LOG #2 (SRV330-702):** Position log #2 by locating its slot over the tab on the front left of the burner. The left end of log #2 is pushed up against the step in the base pan.

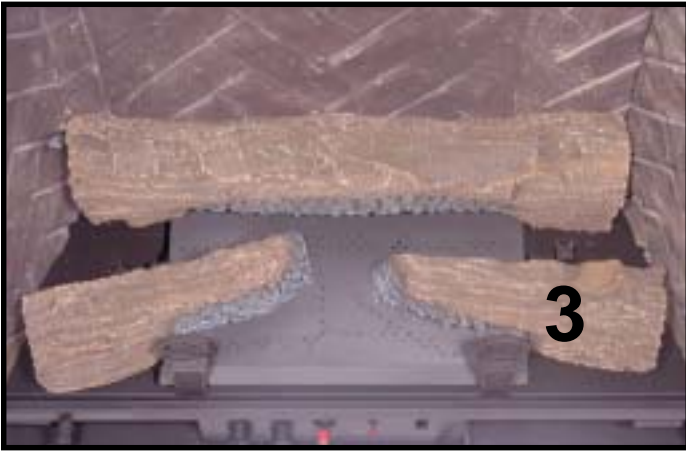


**LOG #3 (SRV330-703):** Position log #3 by locating its slot over the tab on the right front of the burner. The right end of log #3 is pushed up against the step in the base pan.



**LOG #4 (SRV340-705):** Rest log #4 in the left smooth cut-out area on the end of log #1 and place the lower end on log #2. The left end and “bump” of log #4 both rest on log #2.

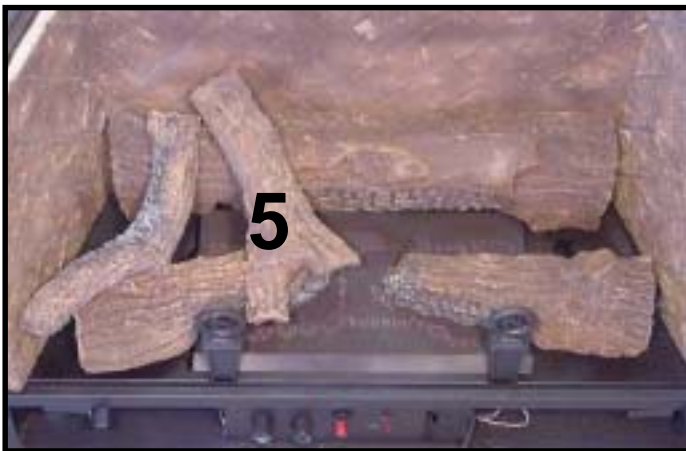

**LOG #5 (SRV330-704):** Rest log #5 in the second smooth cut-out area on the end of log #1 and place the lower end on log #2. The “Y” end of the log sits on the right end of log #2.

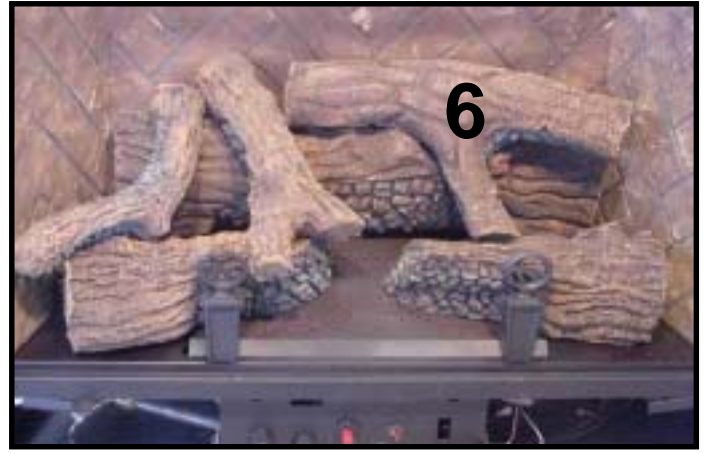

**LOG #6 (SRV330-706):** Nest log #6 in the cut out area on the right side of log #1. The thinnest “arm” of log #6 rests on top of log #3.