


CHARWOOD 18"SEE THRU SET UP INSTRUCTIONS

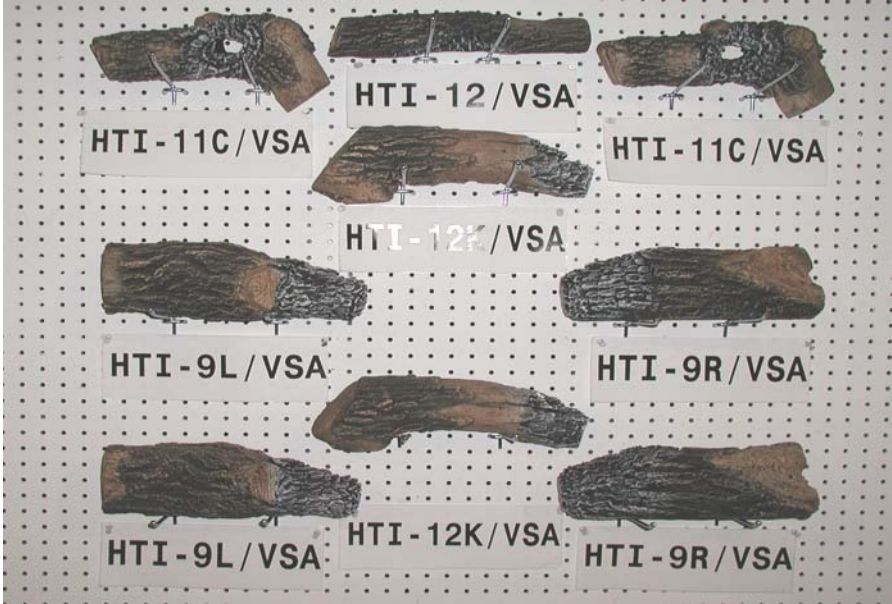

STEP ONE: PLACE 9L/VSA AS SHOWN



STEP FOUR: PLACE 9R/VSA AS SHOWN



STEP SEVEN: PLACE 12K/VSA AS SHOWN



STEP TWO: PLACE 9R/VSA AS SHOWN



STEP FIVE: PLACE 11C/VSA AS SHOWN



STEP FIVE: PLACE 12K/VSA AS SHOWN



STEP THREE: PLACE 9L/VSA AS SHOWN



STEP SIX: PLACE 11C/VSA AS SHOWN



STEP SIX: PLACE 12/VSA AS SHOWN