

Escape-36DV Firescreen

- Installation Instructions -



Leave this manual with party responsible for use and operation.

WARNING

HOT SURFACES!

Glass and other surfaces are hot during operation AND cool down.

Hot glass will cause burns.

- Do not touch glass until it is cooled
- NEVER allow children to touch glass
- Keep children away
 CAREFULLY SUPERVISE children in same room as fireplace.
- Alert children and adults to hazards of high temperatures.

High temperatures may ignite clothing or other flammable materials.


 Keep clothing, furniture, draperies and other flammable materials away.

This appliance has been supplied with an integral barrier to prevent direct contact with the fixed glass panel. Do NOT operate the appliance with the barrier removed.

Contact your dealer or Hearth & Home Technologies if the barrier is not present or help is needed to properly install one.


NOTE: Compare Figures 1 and 2. If the Escape-36DV has the stand-offs noted in Figure 1, follow installation Steps 1 through 9. If the stand-offs are not present and hearth tabs are visible (see Figure 2) follow installation Steps 10 through 18.

- 1. Remove the front panels and ash lip from the fireplace.
- 2. Remove the pull-type mesh by unhooking from the back side of the opening. This mesh is not to be used with the firescreen front.
- 3. Locate the two firescreen support assemblies that are shown in Figure 1.
- 4. Remove the nuts from the firescreen supports.
- 5. Locate the two holes on the left and right side of the glass frame's base. Place the two threaded studs on the firescreen support through the two holes from underneath the glass frame. Tighten the two nuts down on top of the glass frame. The supports will be angled slightly uphill.

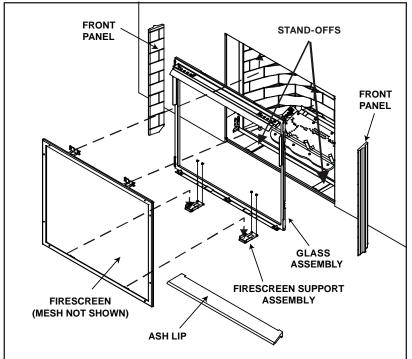


Note: Glass shown off the fireplace for clarity. Glass, panels and ash lip must be installed properly before placing the firescreen on.

Figure 1

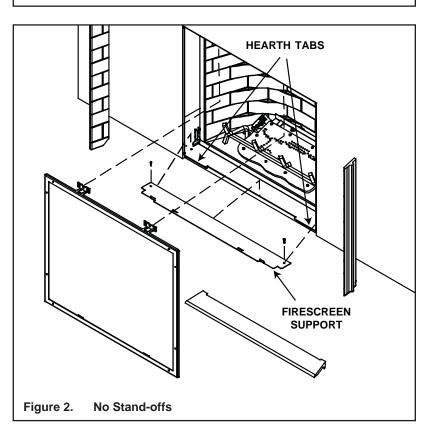

- 6. Repeat for other side.
- 7. Attach the hood to the glass assembly as shown in Figure 3.
- Replace the ash lip and front panels. It is easiest to put the left and right panels in first. Bring the bottoms in toward the center and guide the tops into place while sliding the bottom outward. Place the ash lip in place last.
- Slide the top tabs on the firescreen front behind the top of the viewing opening. Bring the bottom towards the glass. Lift slightly. The two small tabs will rest into the slots on the firescreen supports.

- 10. Remove the front panels and ash lip from the fireplace.
- Remove the pull-type mesh by unhooking from the back side of the opening. This mesh does not get used with the firescreen front.
- Remove the glass assembly from the unit.
- Place the firescreen support on top of the metal floor in front of where the glass was sitting. You may have to flex it into place slightly.
- 14. Attach the firescreen support to the metal floor with the two screws included in the kit
- 15. Replace the glass assembly onto the front of the fireplace and latch all four latches.
- 16. Attach the hood to the glass assembly as shown in Figure 3.
- 17. Replace the ash lip and front panels. It is easiest to put the left and right panels in first. Bring the bottoms in toward the center and guide the tops into place while sliding the bottom outward. Place the ash lip in place last.
- 18. Slide the top tabs on the firescreen front behind the top of the viewing opening. Lift the bottom into place so it sits on top of the support piece and bottoms out against the tabs on each side of the support piece.

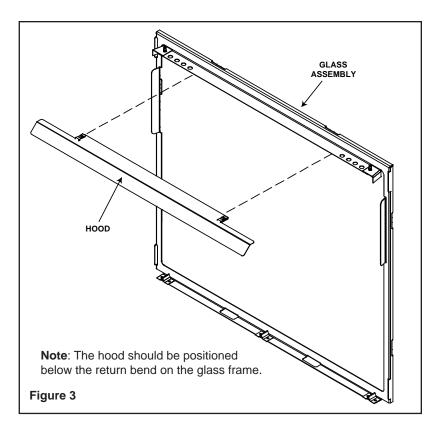

Cleaning Instructions for Fronts

Use a microfiber cloth and Windex® Original Glass Cleaner or 03M003 Stove Bright® Glass Cleaner to clean the front immediately after installation to remove acids deposited by the installer or technician. Spray the cleaner onto the microfiber cloth and carefully wipe the entire surface. The front should be cleaned in this manner annually by the homeowner to remove fingerprints or other contaminants. Once oxidation of the paint pigment has occurred, cleaning will not restore the original color.

Service Parts	
Item	Part Number
Hardware Bag	2012-915A

Please contact your Hearth & Home Technologies dealer with any questions or concerns.

For the location of your nearest Hearth & Home Technologies dealer, please visit www.fireside.com.

Hearth & Home Technologies Inc. 7571 215th Street West, Lakeville, MN 55044 www.fireside.com