

Firescreen, Firescreen Leaf, Tuscan Arch and Tudor Panel Decorative Fronts Models: QFI30FB, QFI35FB - Installation Instructions -



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts, Abrasions or Flying Debris.
Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.



**HOT GLASS WILL
CAUSE BURNS.**

**DO NOT TOUCH GLASS
UNTIL COOLED.**

**NEVER ALLOW CHILDREN
TO TOUCH GLASS.**

A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and shall be installed for the protection of children and other at-risk individuals.

- CAREFULLY SUPERVISE children in same room as fireplace.
- Alert children and adults to hazards of high temperatures.

High temperatures may ignite clothing or other flammable materials.

- Keep clothing, furniture, draperies and other flammable materials away.
- Do NOT operate with protective barriers open or removed.
- The decorative front must remain closed if children will be present during the operation of the fireplace.
- The decorative front may be made operable per these instructions. This may be done only upon request of a person responsible for the use and operation of the fireplace.
- The decorative front can be returned to the locked position following these instructions.

INTRODUCTION

The surround is used to fill the space between the insert and the solid fuel firebox opening. The front is placed onto the surround after it is attached to the insert.

WARNING! Risk of Fire! Combustible materials MUST NOT overlap or be placed under a surround.

Combustible Materials Specification

Materials made of or surfaced with wood, compressed paper, plant fibers, plastics, or other material that can ignite and burn, whether flame proofed or not, or plastered or unplastered shall be considered combustible materials.

CAUTION! Do not install damaged components.

SURROUND INSTALLATION

1. The surround is shipped with the brackets attached for shipping purposes. Remove the surround brackets from the surround by removing two screws on each bracket.
2. Mount the left and right surround brackets onto the appliance with four screws. See Figure 1.
3. Mount the surround to the surround brackets with four screws. See Figure 1.
4. Attach the surround vanity panel with four 10-24 x 3/4 Phillips pan head screws. See Figure 2.
5. Once the surround is attached, slide the appliance backward until the surround is tight to the existing non-combustible finished wall.

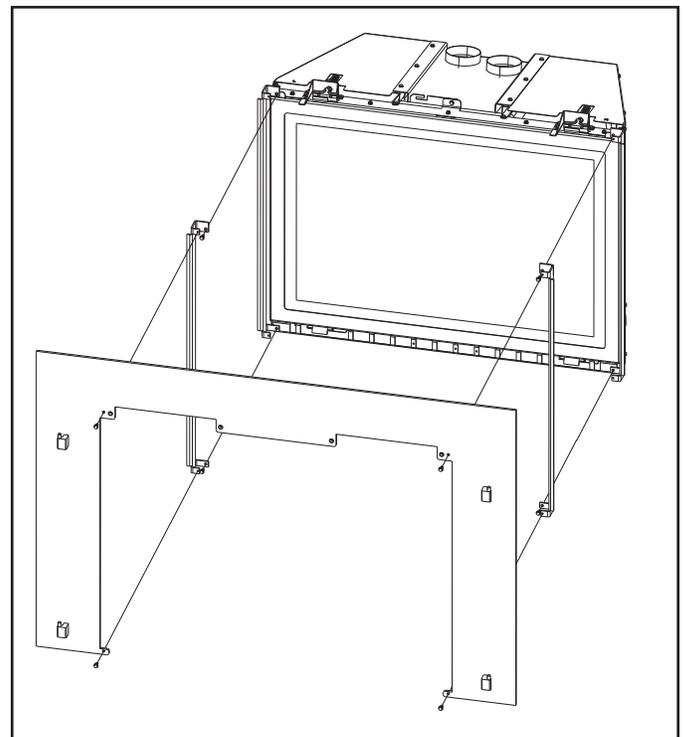


Figure 1

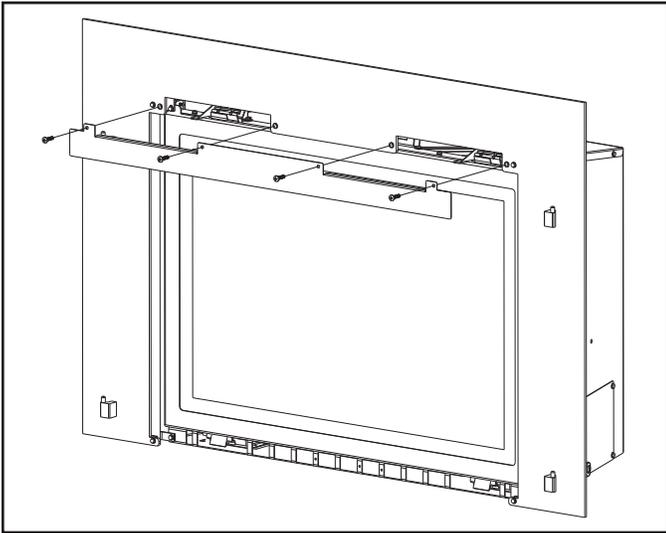


Figure 2

INSTALL GLASS VANITY PANEL

Firescreen Leaves, Tudor Panel and Tuscan Arch Models Only

Firescreen Leaves (FSL-QFI35B):

1. Insert the bottom vanity panel between the glass frame and the glass at the bottom of the appliance as shown in 3.

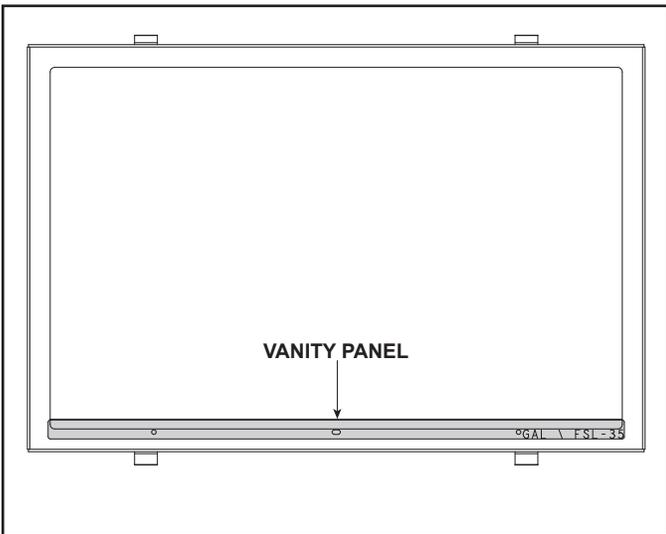


Figure 3. Vanity Panel - Firescreen Front

Tudor Panel (TP-QFI30FB/TP-QFI35FB):

1. Insert the bottom vanity panel between the glass frame and the glass at the bottom of the appliance as shown in Figure 4.

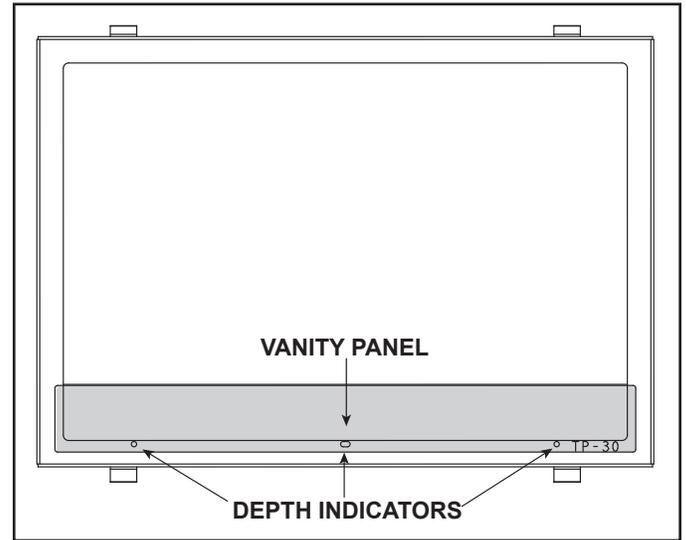


Figure 4. Vanity Panel - Tudor Panel Front

Tuscan Arch (TA-QFI30FB/TA-QFI35FB):

1. Remove glass assembly per the instructions in the appliance installation manual.
2. Insert the bottom vanity panel between the glass frame and the glass at the bottom of the appliance as shown in Figure 5.
3. Position top vanity panel as shown in Figure 5.
4. Locate the hand bend tabs on left and right sides indicated in Figure 6. Bend the tabs downward as shown in Figure 7.
5. Reinstall glass assembly.

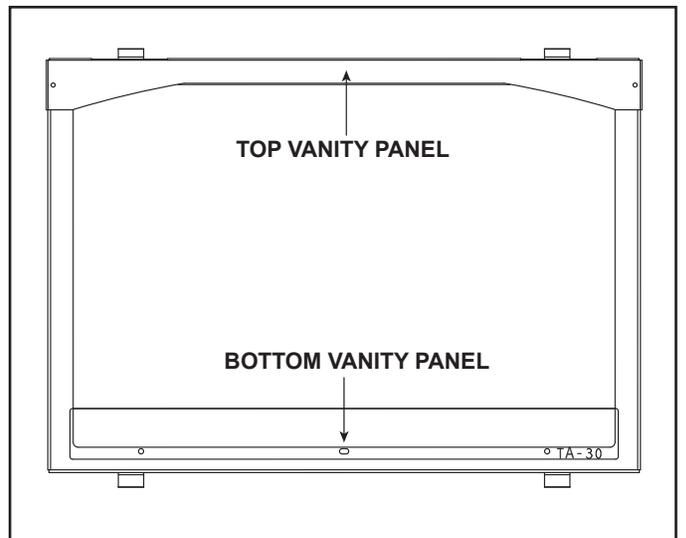


Figure 5. Vanity Panel - Tuscan Arch Front

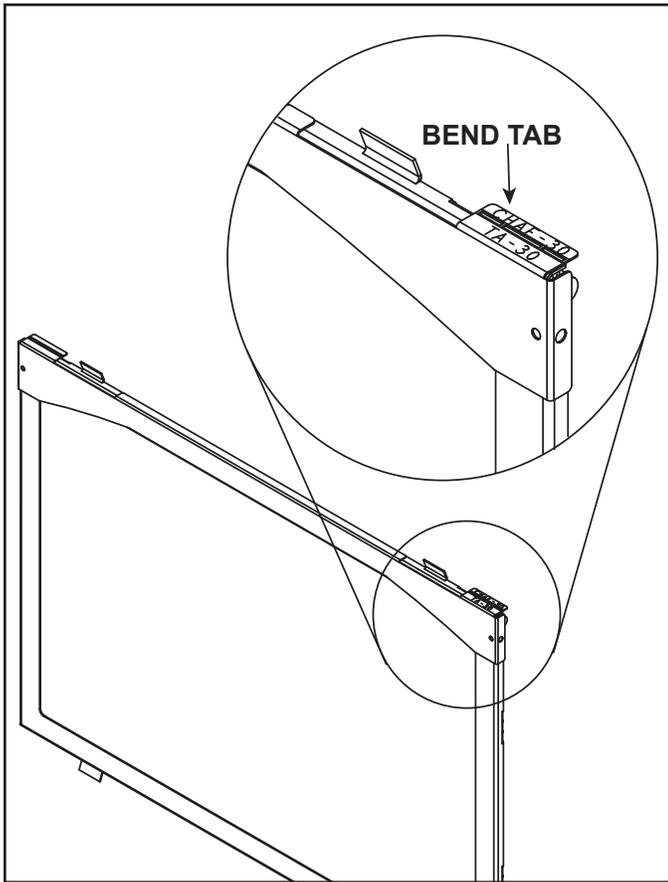


Figure 6. Location of Hand Bend Tabs - Tuscan Arch

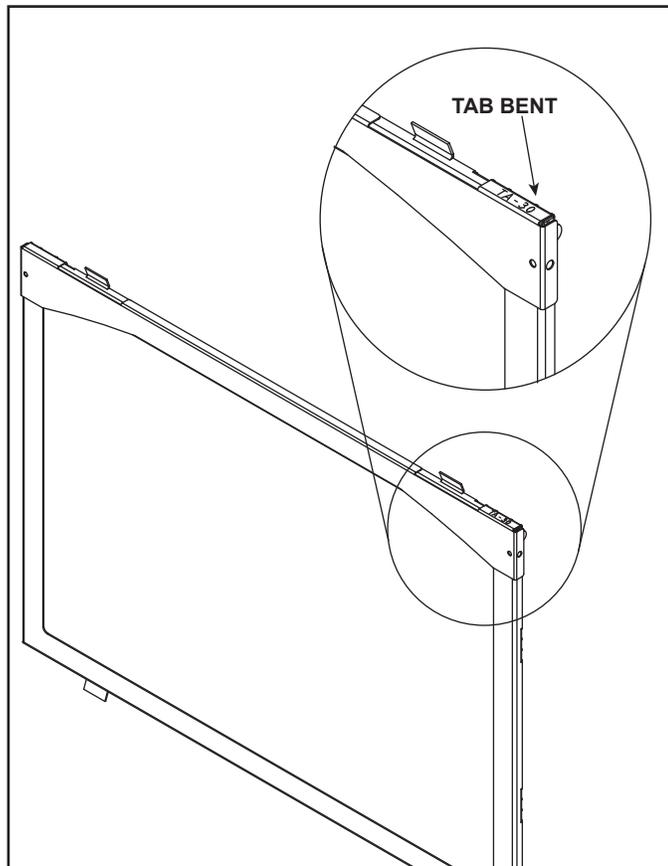


Figure 7. Tabs Bent to Secure Vanity Panel - Tuscan Arch

HANGING THE DECORATIVE FRONT

1. An extension bracket will need to be installed on the appliance for proper unit operation. See Figure 8.
2. All fronts mount on the hinges provided with the surround.

For Inoperable Decorative Fronts:

1. Full width fronts installed in the operable condition pivot open on the left hinges to access the firebox. If the child safety mechanism is engaged it will need to be temporarily removed with a Phillips screwdriver. See Figure 8.
2. Place the full width fronts onto the hinges by sliding the decorative front down onto the hinge pins on the surround.
3. The magnet catch and child safety lock will secure the decorative front on the right side.

For Operable Decorative Fronts:

1. The operable decorative fronts will use the hinges on both sides of the surround.
2. Place the left and right decorative fronts onto the corresponding hinges by sliding the decorative fronts down onto the surrounds hinge pins.

NOTE: The right decorative front has two magnet catches and should close last as it is designed to keep the left decorative front closed.

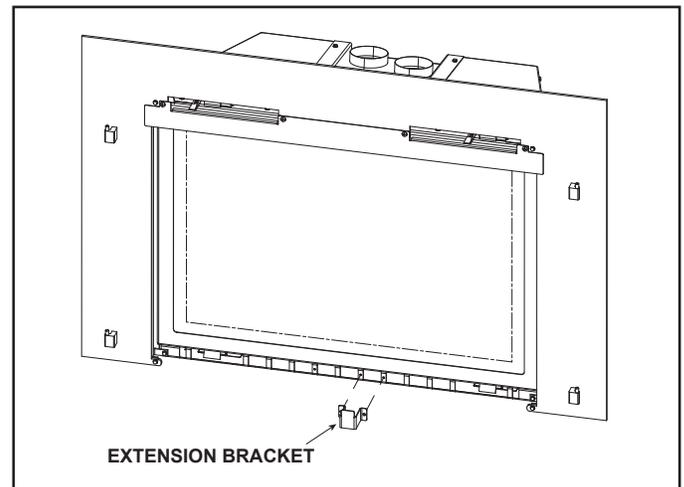


Figure 8

INSTALLATION OF CHILD SAFETY LOCK

CAUTION! Glass is hot during operation and cool down. These decorative fronts are supplied from the factory with parts to lock them shut for child safety.

- To avoid burns or clothing ignition the decorative fronts must remain closed if children will be present during the operation and cool down of the fireplace.
- These decorative fronts may be assembled in locked or operable condition. They must only be made operable upon request of a person responsible for the use and operation of the fireplace. They may be returned to the locked position following these instructions.
- These instructions are to be left with a person responsible for the use and operation of the fireplace.

Tudor Panel

1. The decorative fronts are shipped with a child safety lock. To lock the decorative fronts, a Phillips screw driver and a 3/8 in. wrench will be needed. After hanging the decorative fronts on the surround, place the bolt through the back of the decorative fronts. The bolt goes through both decorative fronts in the middle at the top, and is retained by a nut to prevent them from operating. See Figure 9.

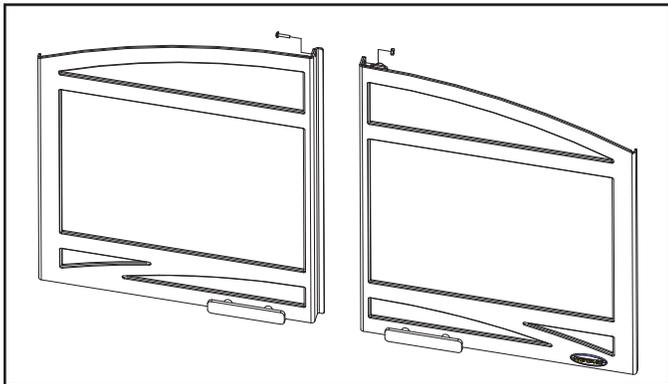


Figure 9

2. If the bolt and nut used as a child safety lock are removed, store them in the extension bracket for future use. See Figure 3.

Firescreen, Firescreen Leaf And Tuscan Arch

1. The decorative fronts are shipped with a child safety lock.
2. After hanging the decorative front on the surround, place the child safety assembly with the provided fastener through the hole in the lower right corner of the decorative front.
3. Shut the decorative front and line up the safety assembly over the hinge pin.
4. Tighten the fastener with a Phillips screwdriver. See Figure 10.
5. If the child safety lock assembly is removed, store it in the extension bracket for future use. See Figure 8.



Figure 10.

Service Part List

SURROUNDS	DESCRIPTION	PART NUMBER
FBI30-4027-BK, -SB	VANITY PANEL	2201-210
FBI30-4230-BK, -SB		
FBI304432-BK, -SB		
FBI35-4229-BK, -SB	VANITY PANEL	2202-210
FBI35-4432-BK, -SB		
FBI35-4832-BK, -SB		
DECORATIVE FRONTS	DESCRIPTION	PART NUMBER
TP-QFI30FB-BK, -SB / TPA-QFI30FB-BK, -SB	MESH ASSEMBLY, LEFT	2235-095
	MESH ASSEMBLY, RIGHT	2235-096
	EXTENSION BRACKET	2235-216
TP-QFI35FB-BK, -SB / TPA-QFI35FB-BK, -SB	MESH ASSEMBLY, LEFT	2237-095
	MESH ASSEMBLY, RIGHT	2237-096
	EXTENSION BRACKET	2235-216
FS-QFI30FB-BK, -SB	EXTENSION BRACKET	2235-216
	MESH	2235-012
FS-QFI35FB-BK, -SB	EXTENSION BRACKET	2235-216
	MESH	2237-012
FSL-QFI30FB-BK, -SB	EXTENSION BRACKET	2235-216
	MESH	2235-281
FSL-QFI35FB-BK, -SB	EXTENSION BRACKET	2235-216
	MESH	2237-281
TA-QFI30FB-BK, -SB	MESH	2235-224
	EXTENSION BRACKET	2235-216
TA-QFI35FB-BK, -SB	MESH	2237-224
	EXTENSION BRACKET	2235-216

Cleaning Instructions for Decorative Fronts

Use a microfiber cloth and Windex® Original Glass Cleaner or 03M003 Stove Bright® Glass Cleaner to clean the decorative front immediately after installation to remove acids deposited by the installer or technician. Spray the cleaner onto the microfiber cloth and carefully wipe the entire surface. The decorative front should be cleaned in this manner annually by the homeowner to remove fingerprints or other contaminants. Once oxidation of the paint pigment has occurred, cleaning will not restore the original color.

Quadra-Fire, a brand of Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.quadrafire.com

Please contact your Quadra-Fire dealer with any questions or concerns.
For the location of your nearest Quadra-Fire dealer, please visit www.quadrafire.com.