

STONES-C32, STONES-C3642

MODELS: COSMO32-IFT, COSMO42-IFT, COSMO32-IFT-B, COSMO36-IFT-B, COSMO42-IFT-B,
SLR-X-AU, SLR-X-AU-L, B41L-AU
- Installation Instructions -



Leave this manual with party responsible for use and operation.

WARNING! Choking Hazard! Keep stones out of reach of children.

CAUTION! Risk of Cuts, Abrasions or Flying Debris. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

Note: STONES-C32 and STONES-C3642 may not be used with the media supplied with the COSMO32-IFT, COSMO42-IFT, COSMO32-IFT-B, COSMO36-IFT-B, COSMO42-IFT-B, SLR-X-AU, SLR -X-AU-L or B41L-AU models.

NOTICE: THE SLR-X-AU-L appliance requires a burner change to be able to be used with this kit. Burner SRV2491-007 is available through your dealer. Follow the instructions included with the burner prior to installing this kit.

NOTICE: When installing stones into B41L-AU, burner must be replaced with part number 2617-007. Stones are not approved for use with burner that is shipped with the BL41-AU. See installation manual for burner replacement instructions.

PREPARATION

CAUTION! Risk of Burns! The fireplace should be turned off and cooled before stones are installed.

1. Remove decorative front and glass assembly. Refer to appliance installation manual for glass removal and replacement instructions.

WARNING



Delayed Ignition Risk
Risk of Asphyxiation or Fumes.



- Place stones according to instructions.
- Do NOT place stones on burner.
- Do NOT place stones in gap between pilot/pilot shield and burner.

- Do NOT place stones in a position that they may lodge or fall into the gap between pilot/pilot shield and burner.
- Do NOT place stones in area between glass and firebox.
- Do NOT place stones in a position that they may fall into area between glass and firebox.
- Do NOT use any stones other than the Hearth & Home Technologies-supplied options for this fireplace model.

Fireplace will not function properly.
Delayed ignition could occur.

STONES INSTALLATION

1. The maximum number of stones that may be installed varies depending on the model size. See Table 1.

MODEL	MAX. STONE QUANTITY
COSMO32-IFT	45
COSMO32-IFT-B	45
COSMO36-IFT-B	63
B41L-AU	63
COSMO42-IFT	63
COSMO42IFT-B	63
SLR-X-AU	63
SLR-X-AU-L	63

Table 1.

- Place desired number of stones anywhere except on the burner or in the gap between the pilot shield and the burner. Do not stack stones. See Figure 1.
- The DRIFTWOOD-C32/C36/C42 Log sets may be used with STONES-C32/C3642. Do not allow stones or logs to cross the burner or the pilot shield.

NOTICE: DO NOT STACK STONES. Place stones in a single layer. Flame appearance could be impacted. Sooting could occur.

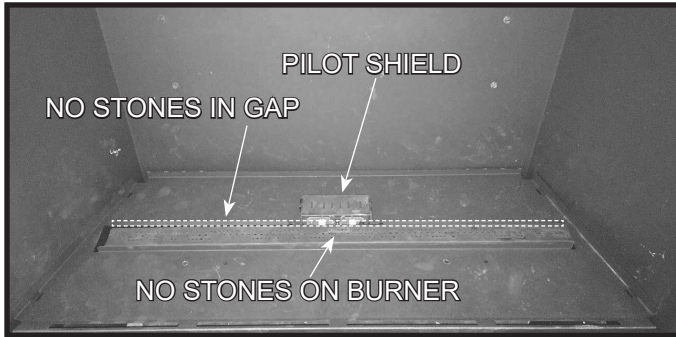


Figure 1.

Note: The arrangement and quantity of stones is determined by customer preference. Figure 2 shows an example of a typical arrangement.

- Check the pilot area to ensure there are no stones in between the burner and the pilot. Performance issues will occur if stones are present.
- Ensure the gap between the pilot/pilot shield and burner is clear. Remove any stones that may have fallen into this area.

WARNING! Risk of Explosion! Do NOT place stones in a position that they may lodge or fall into area between the pilot shield and the burner. Fireplace will not function properly. Delayed ignition could occur.

- Turn the appliance on to verify that the pilot and the burner light properly.
- Reinstall glass assembly.
- Reinstall decorative front.

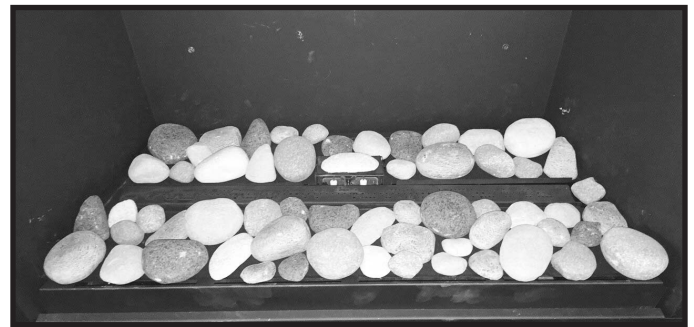


Figure 2. Example of Stones Installed

Please contact your Heat & Glo dealer with any questions or concerns.
For the location of your nearest Heat & Glo dealer, please visit www.heatnglo.com.

Heat & Glo, a brand of Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.heatnglo.com